




PCZX1 / PCZX3 / PCZW1 / PCZW3

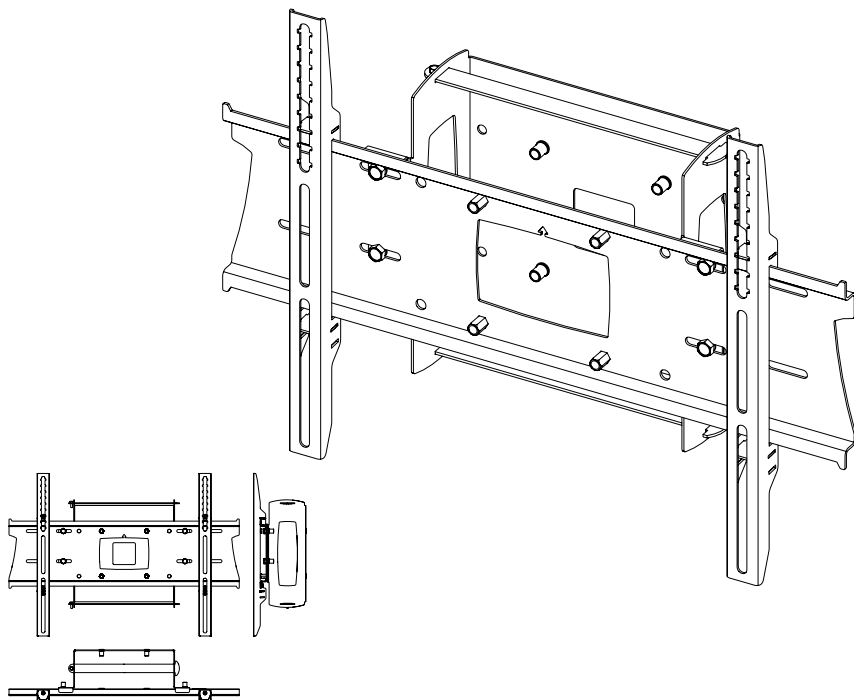

Screen Size: 33 - 70" | **Guide Max. Weight:** 60kg

Please check model specific details before installing

Revised 16/08/24

WARNING

Please carefully inspect the product before assembling. If you notice any apparent damage, call your carrier claims agent and do not continue the installation until it has been reviewed. Please watch for pinch points. Do not put your fingers between moveable parts. Do not tamper with or disassemble any spring loaded parts. Before installing, make sure that the supporting surface will support five times the combined load of the solution and the hardware. Never exceed the maximum load capacity. Please also layout all components to ensure that you have all of the required parts before proceeding (see BOM list on following page). Use of this product for anything other than its specified use may result in failure or personal injury. This product is intended for indoor use only. We recommend using a qualified trades person for installation. Use an assistant or lifting equipment to lift and position products.

For support, please call: +44 (0)1865 767676 or email: sales@unicol.com



#	TOOLS REQUIRED
1	4mm & 5mm Allen Keys
2	Pozi Head Screwdriver
3	19mm Spanner
4	17mm Spanner

INSTALLERS REQUIRED
1-2


COMPONENTS

1

2

3


#	DESCRIPTION	QTY
1	Universal Back Plate	1
2	Screen Mount Arms	2
3	Universal PC Housing	1

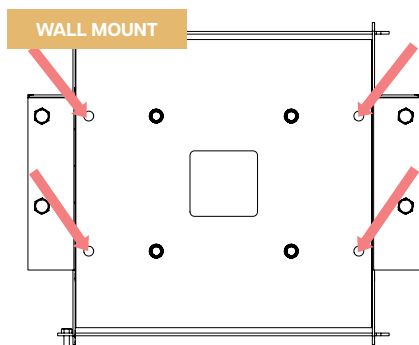

STEP 1


Using the 4x wall mounting holes on the back of the universal pc housing, determine where you want to install your mount, mark it and fix into position.

Please consider cabling and wall fixings prior to installation. Please check surface is capable of supporting 5x the combined solutions weight.

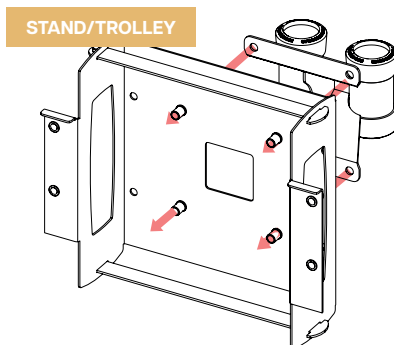


STEP 1

If mounting to a stand, trolley, floor-to-wall or floor-to-ceiling mount, you will need to secure using the four central rivnut holes on the back of the universal PC housing. Line the holes up with the respective stand/trolley mast or adapter (as shown above) and secure from behind.

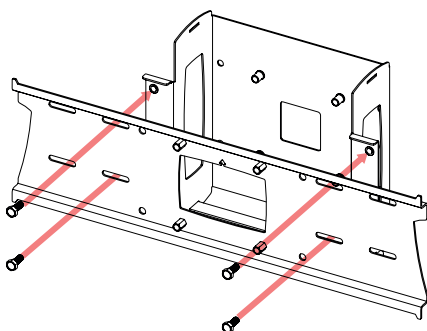


STEP 2

Take the universal back plate and line it up with the fixing holes on the front of the pc housing. Secure into position via the 4x fixing holes. Horizontally adjust as required before tightening into place.

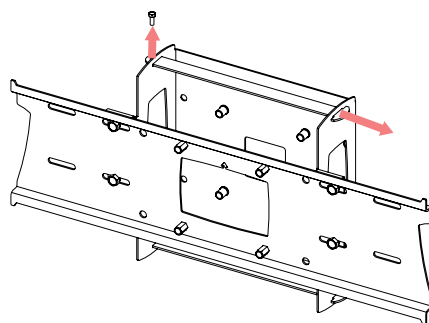

STEP 3


Remove the screw that keeps the top security latch in place and slide it out.

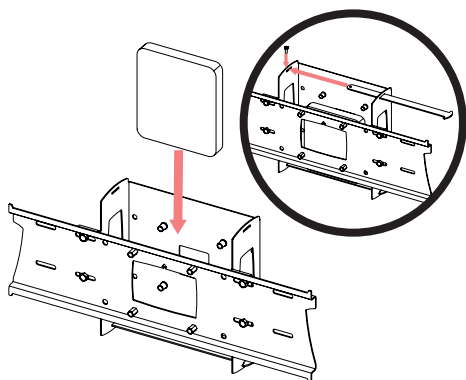

STEP 4


Slide your small form PC or other AV device into the housing. Thread any cabling out through the bottom, sides or over the universal back plate.

Slide the top security latch back into place and secure again. You can also swap the screws on the latches for padlocks for additional security if required.

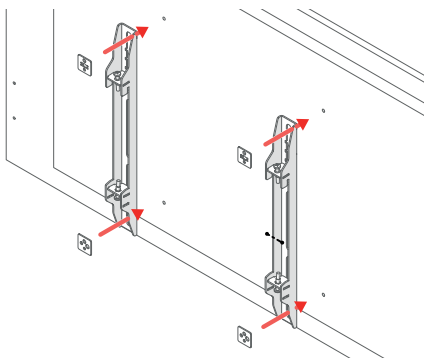


STEP 5

Locate the mounting holes on the back of your screen. Line the two mounting arms up and using the tag locks and manufacturer recommended screws (included in fixing kit), attach the arms to the back of the screen.

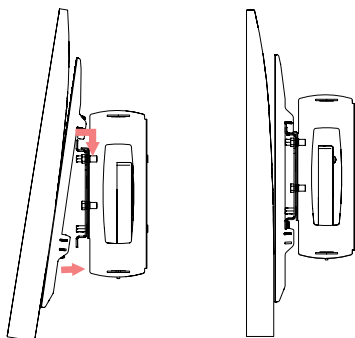

STEP 6

Line the screen and arms up with the secured back plate and offer it up at a slight angle - allowing the top of the arms to hook over the lip of the back plate. Gently lower the screen until the arms are securely hanging on top of the back plate.

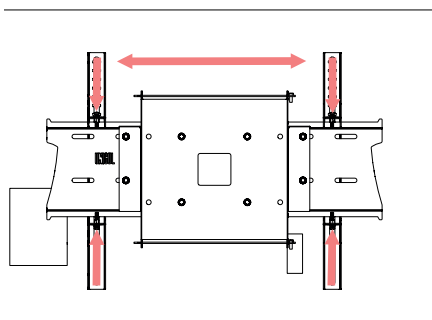

STEP 7

Once you have centered the screen, adjust the level of the screen with the two top screws on the mount arms. Once leveled secure the screen by tightening the bottom two screws.