





MBW / MBC / MV / MD2U / MD9U

Ceiling Suspended Menu Boards *pg 2-3*
MBC346 / MBC350 / MBC355 - 3x1 menu board kits
MBC446 / MBC450 / MBC455 - 4x1 menu board kits

Wall Mounted Menu Boards *pg 4-5*
MBW346 / MBW350 / MBW355 - 3x1 menu board kits
MBW446 / MBW450 / MBW455 - 4x1 menu board kits

Wall Mounted Video Walls *pg 6-7*
MV246 / MV250 / MV255 - 2x2 video wall kits
MV346 / MV350 / MV355 - 3x3 video wall kits
MV446 / MV450 / MV455 - 4x4 video wall kits

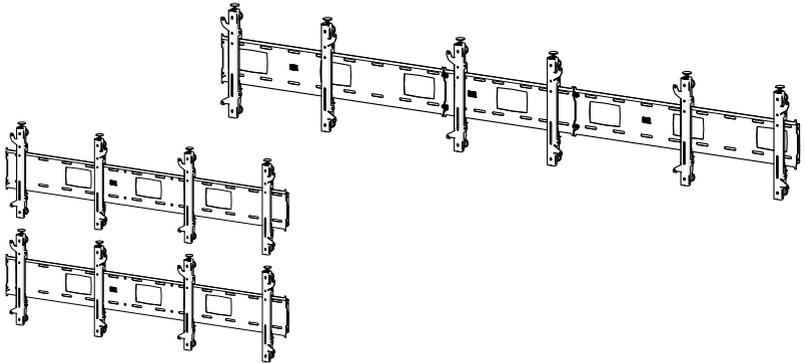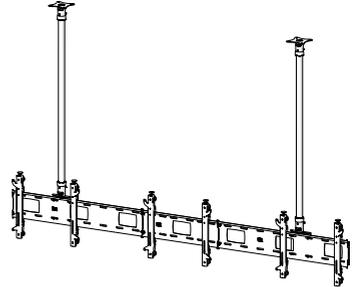

Screen Size: 46, 50, 55" | **Guide Max. Weight:** 35kg*

Please check model specific details before installing

Revised 22/05/25

WARNING

Please carefully inspect the product before assembling. If you notice any apparent damage, call your carrier claims agent and do not continue the installation until it has been reviewed. Please watch for pinch points. Do not put your fingers between moveable parts. Do not tamper with or disassemble any spring loaded parts. Before installing, make sure that the supporting surface will support five times the combined load of the solution and the hardware. Never exceed the maximum load capacity. Please also layout all components to ensure that you have all of the required parts before proceeding (see BOM list on following page). Use of this product for anything other than its specified use may result in failure or personal injury. This product is intended for indoor use only. We recommend using a qualified trades person for installation. Use an assistant or lifting equipment to lift and position products.

For support, please call: +44 (0)1865 767676 or email: sales@unicol.com




#	TOOLS REQUIRED
1	3/16th Allen Key
2	17mm Spanner (for M10)
3	Pozidrive Screwdriver

INSTALLERS REQUIRED
2

COMPONENTS


#	MBC346 / MBC350 / MBC355	QTY	#	MBC446 / MBC450 / MBC455	QTY
1	ScreenRail Module Length	#	1	ScreenRail Module Length	#
2	CP1 Ceiling Plate	2	2	CP1 Ceiling Plate	3
3	Tool-less Adjustable Screen Arms	6	3	Tool-less Adjustable Screen Arms	8
4	1500C Ceiling Suspension Column	2	4	1500C Ceiling Suspension Column	3
5	PS7 Single Column Titing Adapter	2	5	PS7 Single Column Titing Adapter	3

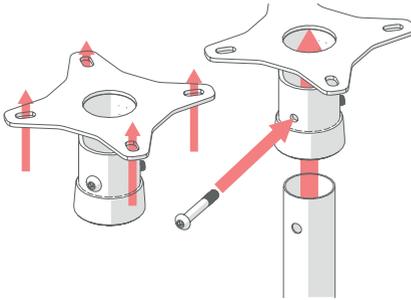

STEP 1

Determine where you want to install your ceiling mounts, mark and fix into position using suitable anchors. Using the through bolt, secure the column into place and tighten the two grub screws at the rear.


Please consider cabling and ceiling fixings prior to installation. Please check surface is capable of supporting 5x the combined solutions weight.

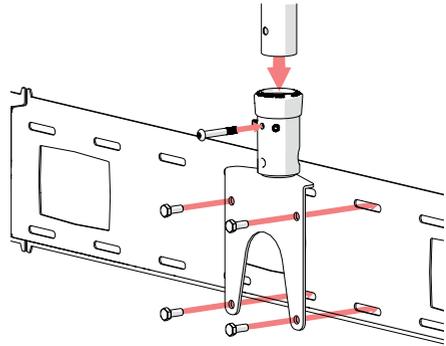

STEP 2


Slide adapter socket over column and secure with through bolt, tighten the 2 grub screws either side.

With assistance offer up the rail to the 2 column adapters and fix using the M10x25 hex screws and nuts provided.

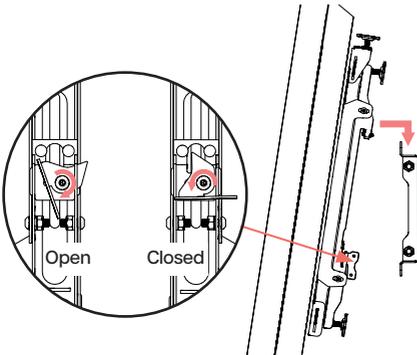

STEP 3

Fix rail arms to the fixing holes in your screen. Turn arm screen locks to open position. Using another team member, lift each screen up and gradually offer it up to the rail. Gently tilting the screen forward, hook the arms over the rail lip and allow the screen to lower. Centre the screens horizontally by sliding from side to side until screens are butted together.

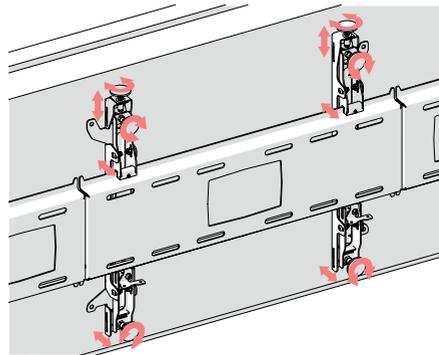

STEP 4

Once centred, ensure the bottom levers on the arms are locked. Adjust each screen so that it is level with the next screen by rotating the round knobs in or out at the top, bottom and rear of each arm. Connect cables to screen to complete installation.



#	TOOLS REQUIRED
1	3/16th Allen Key
2	17mm Spanner (for M10)
3	Pozidrive Screwdriver

INSTALLERS REQUIRED
2


COMPONENTS

1

1


2

#	MBW346 / MBW350 / MBW355	QTY	#	MBW446 / MBW450 / MBW455	QTY
1	ScreenRail Module Length	#	1	ScreenRail Module Length	#
2	Tool-less Adjustable Screen Arms	6	2	Tool-less Adjustable Screen Arms	8

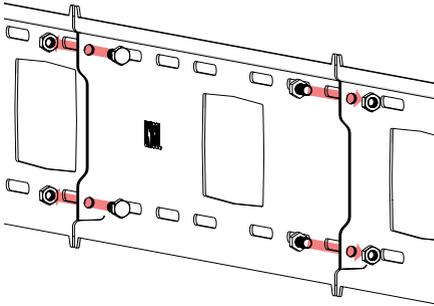


STEP 1

Join the rails together using the M10x20 Hex Bolts and nuts supplied (2 at each joint). This can be done either before fixing to the wall or after depending on what is easiest. Fix to the wall using masonry plugs or other reliable fixings suitable for 5 x the load including all fittings. Ensure the rails are level.

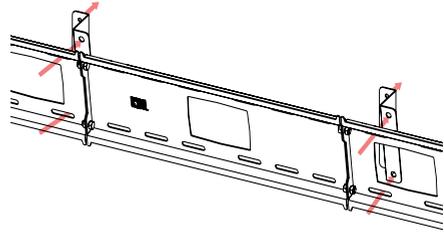


STEP 2 [OPTIONAL]

To tilt the whole rail, use either SR10 or SR20 fixed tilt brackets between wall and rail wall fixing points. Fix to the wall using masonry plugs or other reliable fixings suitable for 5 x the load including all fittings. Ensure the rails are level.

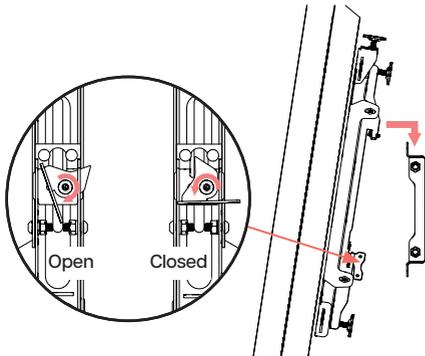

STEP 3

Fix rail arms to the fixing holes in your screen. Turn arm screen locks to open position. Using another team member, lift each screen up and gradually offer it up to the rail. Gently tilting the screen forward, hook the arms over the rail lip and allow the screen to lower. Centre the screens horizontally by sliding from side to side until screens are butted together.

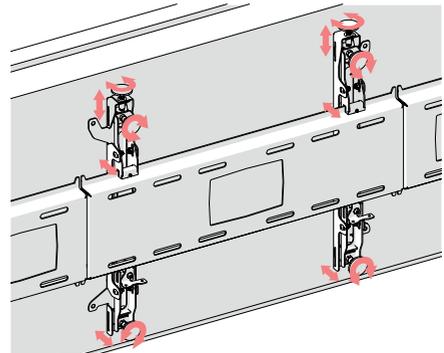

STEP 4

Once centred, ensure the bottom levers on the arms are locked. Adjust each screen so that it is level with the next screen by rotating the round knobs in or out at the top, bottom and rear of each arm. Connect cables to screen to complete installation.



#	TOOLS REQUIRED
1	3/16th Allen Key
2	17mm Spanner (for M10)
3	Pozidrive Screwdriver

INSTALLERS REQUIRED
2

COMPONENTS

#	MV246 / MV250 / MV255	QTY	#	MV346 / MV350 / MV355	QTY
1	ScreenRail Module Length	#	1	ScreenRail Module Length	#
2	Tool-less Adjustable Screen Arms	8	2	Tool-less Adjustable Screen Arms	18

#	MV446 / MV450 / MV455	QTY
1	ScreenRail Module Length	#
2	Tool-less Adjustable Screen Arms	32

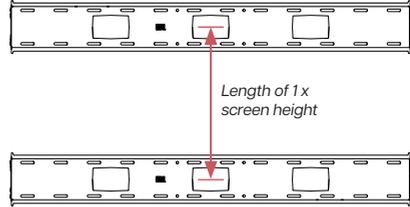
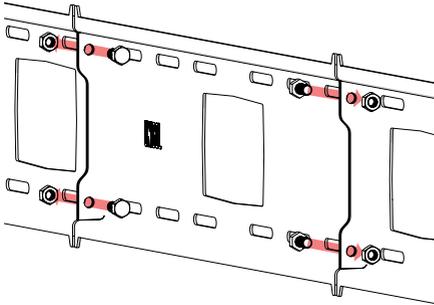


Illustration shows 2 single rails each long enough to support 2 x 50" screens


STEP 1

Join the rails together using the M10x20 Hex Bolts and nuts supplied (2 at each joint). This can be done either before fixing to the wall or after depending on what is easiest. Fix to the wall using masonry plugs or other reliable fixings suitable for 5 x the load including all fittings. Ensure the rails are level.

STEP 2


Fix second row to the wall. If the VESA screen fixing hole array is central on the rear of the screen then the second rail/s row is a screen height length from rail centre to centre (see above).

Continue to add rail rows for the number of screens you have and in what orientation your video wall is.

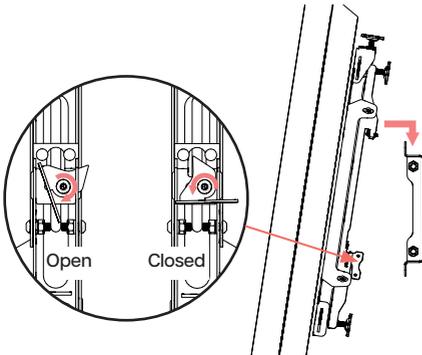

STEP 3


Fix rail arms to the fixing holes in your screen. Turn arm screen locks to open position. Using another team member, lift each screen up and gradually offer it up to the rail. Gently tilting the screen forward, hook the arms over the rail lip and allow the screen to lower. Centre the screens horizontally by sliding from side to side until screens are butted together.

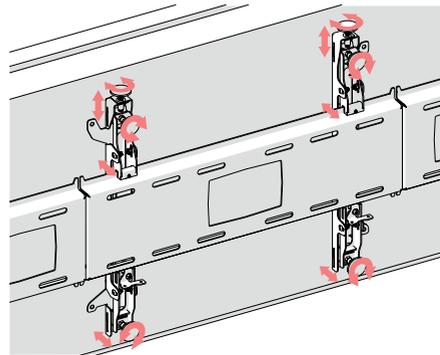

STEP 4

Once centred, ensure the bottom levers on the arms are locked. Adjust each screen so that it is level with the next screen by rotating the round knobs in or out at the top, bottom and rear of each arm.

Utilise the adjustments on the mount arms to align all screens together. Cable up as you fit each screen to complete installation.

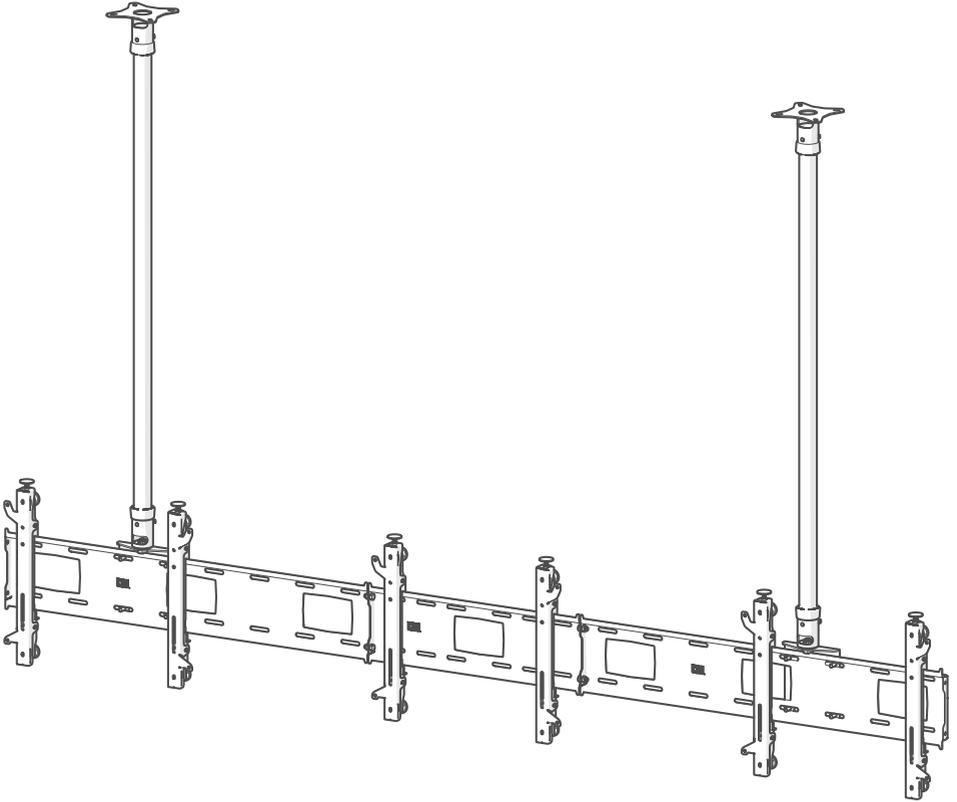

Any Questions?

+44 (0)1865 767676

sales@unicol.com

unicol.com/instructions