


TL1 - PZX

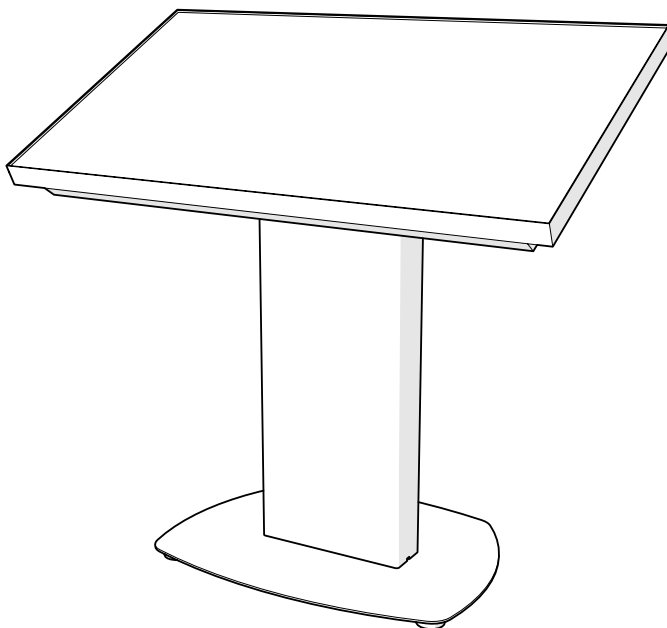

Guide Max. Screen Weight: 60kg

Please check model specific details before installing

Revised 19/06/23

WARNING





Please carefully inspect the product before assembling. If you notice any apparent damage, call your carrier claims agent and do not continue the installation until it has been reviewed. Please watch for pinch points. Do not put your fingers between moveable parts. Do not tamper with or disassemble any spring loaded parts. Before installing, make sure that the supporting surface will support five times the combined load of the solution and the hardware. Never exceed the maximum load capacity. Please also layout all components to ensure that you have all of the required parts before proceeding (see BOM list on following page). Use of this product for anything other than its specified use may result in failure or personal injury. This product is intended for indoor use only. We recommend using a qualified trades person for installation. Use an assistant or lifting equipment to lift and position products.

For support, please call: +44 (0)1865 767676 or email: sales@unicol.com


#	TOOLS REQUIRED
1	3/16th Allen Key
2	17mm Spanner (for M10)
3	Pozidrive Screwdriver

INSTALLERS REQUIRED
1-2

COMPONENTS

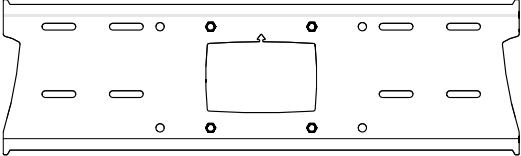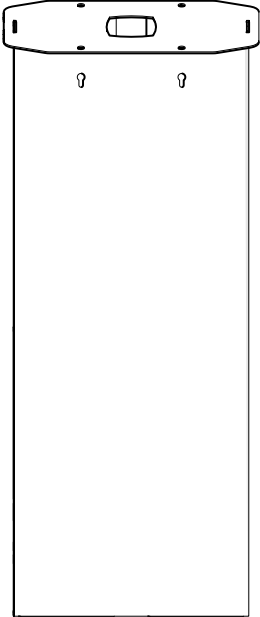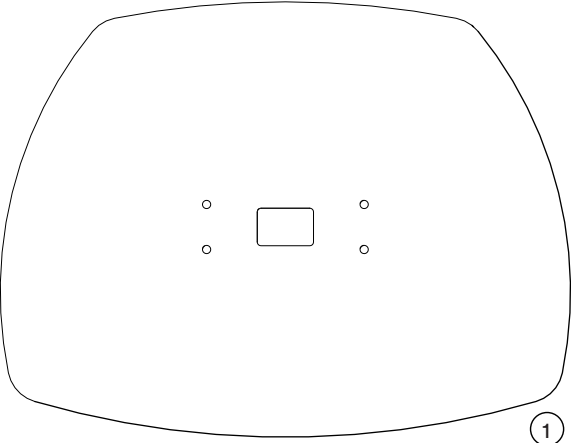


#	DESCRIPTION	QTY
1	Base	1
2	Mast Unit	1
3	Mount Backplate (PZX)	1
4	Mount Arms (PZX)	1

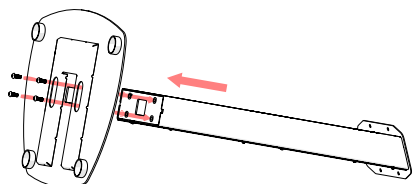


STEP 1

Identify base and mast. The base is heavy so you might want another person to support it. Allow the floor to take the weight of the base and mast and position them in order to fix together using the 4 x M10 x 25 allen screws supplied.

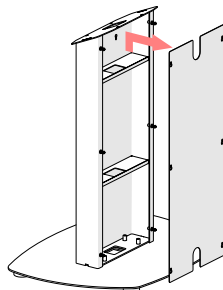


STEP 2

Stand the assembly upright and remove rear cover by loosening the 6 x M6 allen screws sufficiently in order to lift the rear cover and pull towards you. Put cover to one side.

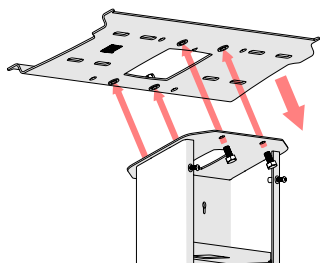


STEP 3

Place the mount backplate over the top of the mast and fix in position using the 4 x M10 X 25 hex head bolts.

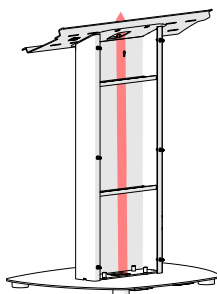


STEP 4

While the stand is relatively light, without screen, now is a good time to roughly position it and run the cables up from beneath the base. There is room for AV devices within the mast and an aperture in the mount to feed cables through to the screen.

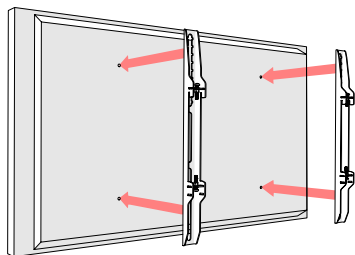

STEP 5


Fix the mount arms to the screen fixing holes using fixing screws for your particular screen. Universal fixing pack supplied.

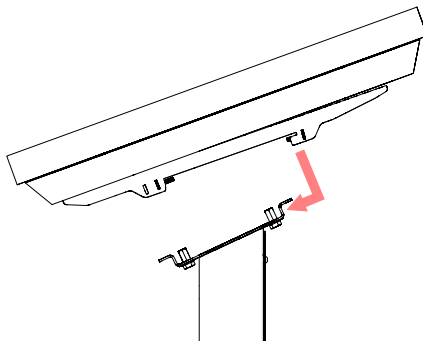

STEP 6

Together with another person lift the screen and lower onto the mount backplate so that the hooks at the top of the mount arms engage with the rail of the backplate. Allow the screen to rest on the backplate.


Cable up screen.

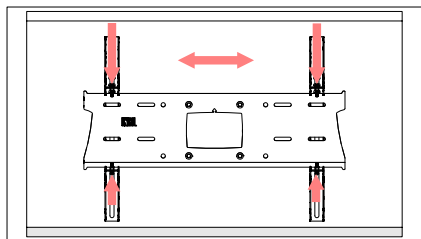

STEP 7

Centre the screen by sliding from side to side. Level the screen by adjusting the top screws on the arms (screw in or out). Once adjusted tighten the mount securing screws on the bottom of each arm to lock screen in place.

Note: The bottom screws must be loose to adjust screen.

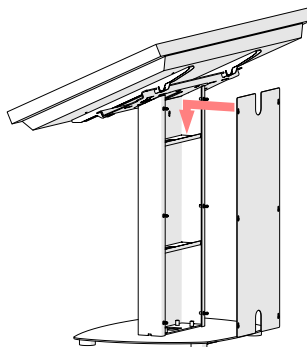

STEP 8

Refit rear cover in the reverse fashion as Step 2.

Test the unit to complete installation.